User Manual

Manual del usuario

crane

POP-UP SOCCER GOALS

PORTERÍAS DE FÚTBOL DESPLEGABLES

Zur Konstruktion V2

English.....06
Español 13

CERTIFIED hanse control myhansecontrol.com
User-friendly Manual

Contents

Overview **3**
Use **4**
Package contents/parts **6**
General information **7**
Reading and storing the user manual 7
Explanation of symbols 7
Safety **7**
Proper use 7
Safety instructions 8
Checking the soccer goal andpackage contents **9**
Assembling and setting up the soccer goal **10**
Taking down and folding up the soccer goal **11**
Cleaning **11**
Storage **11**
Technical data **12**
Disposal **12**
Disposing of the packaging 12
Disposing of the soccer goal 12

zur Korrektur V02

Dok./Rev.-Nr. 194821_20161205

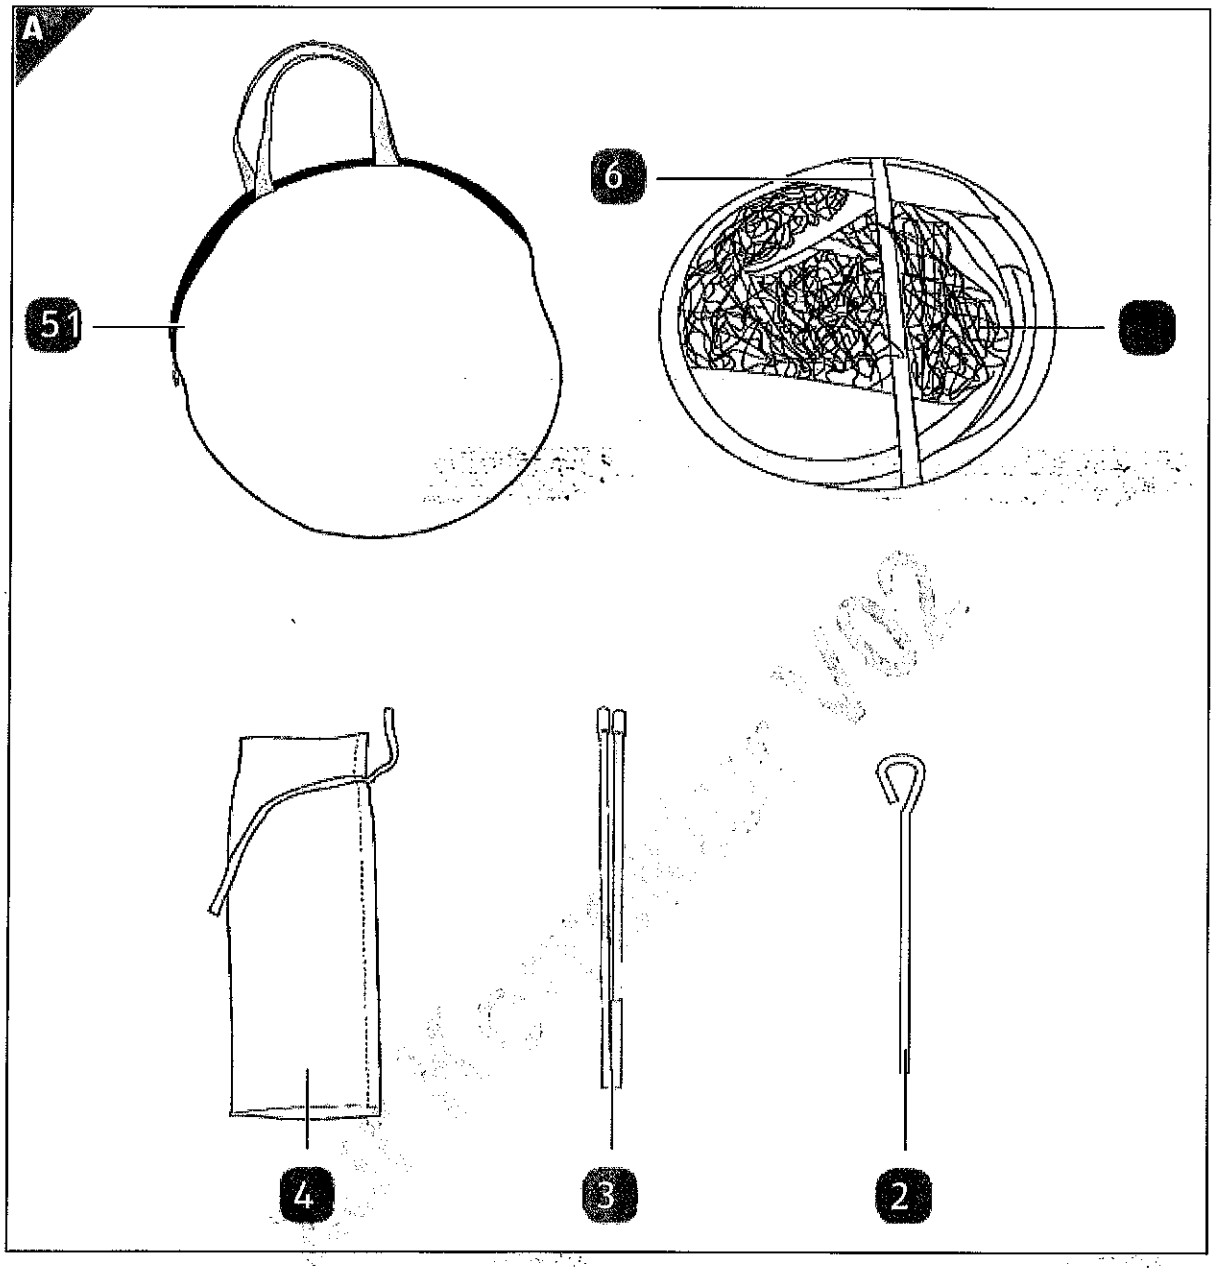
A
51
6
4
3
2

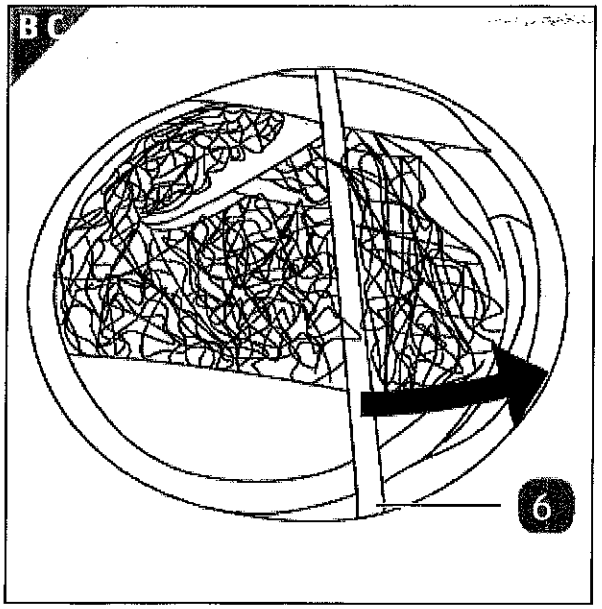
B C
6

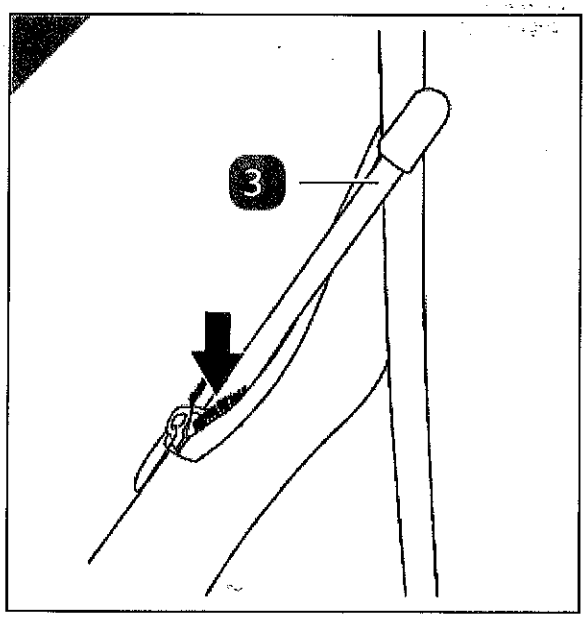
3

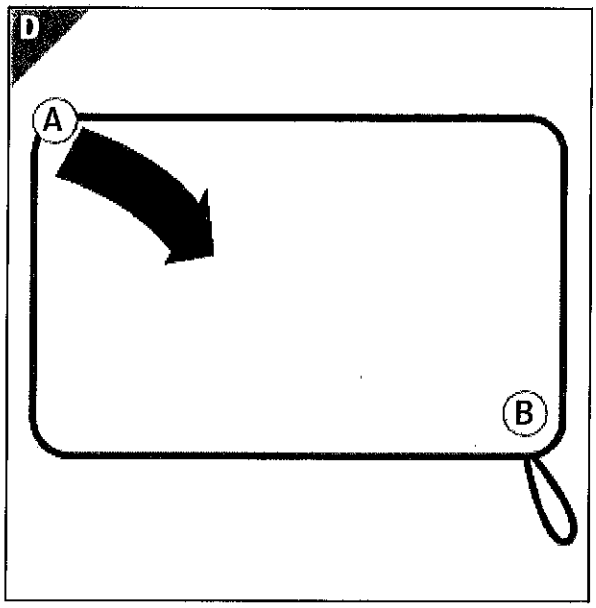
D
A
B

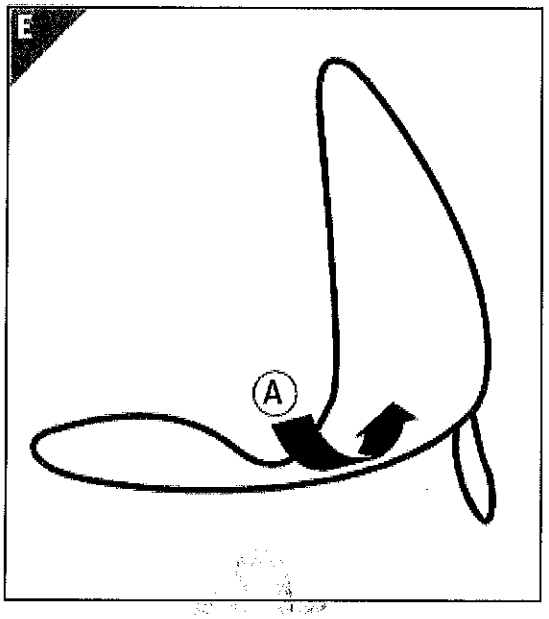
E
A

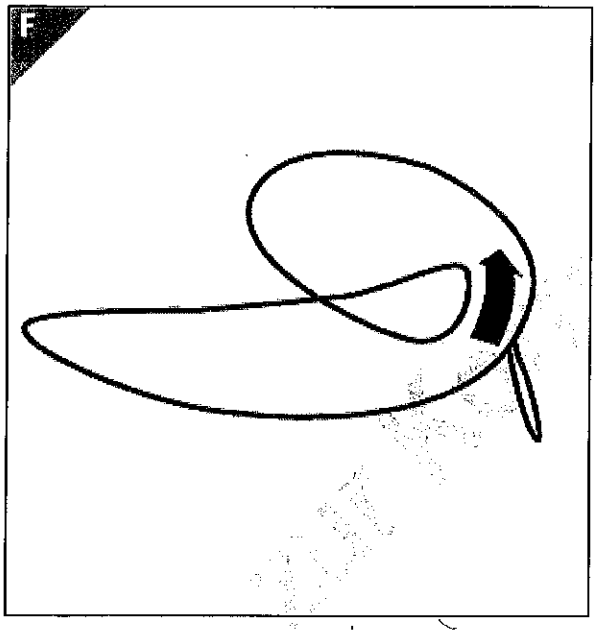
F

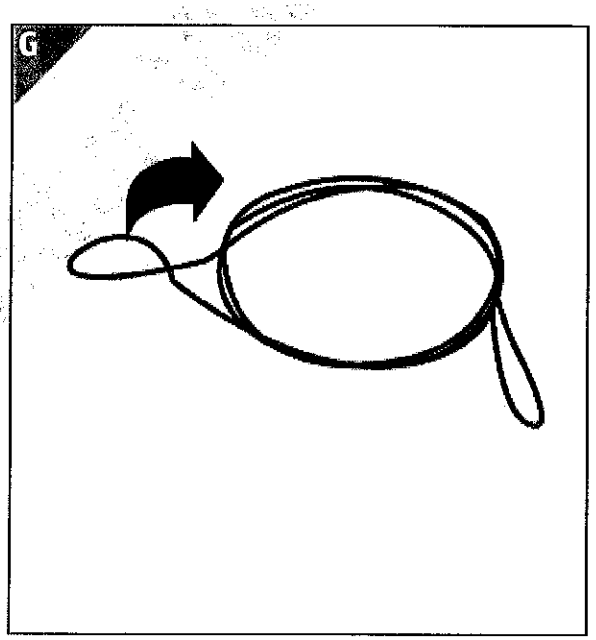
G

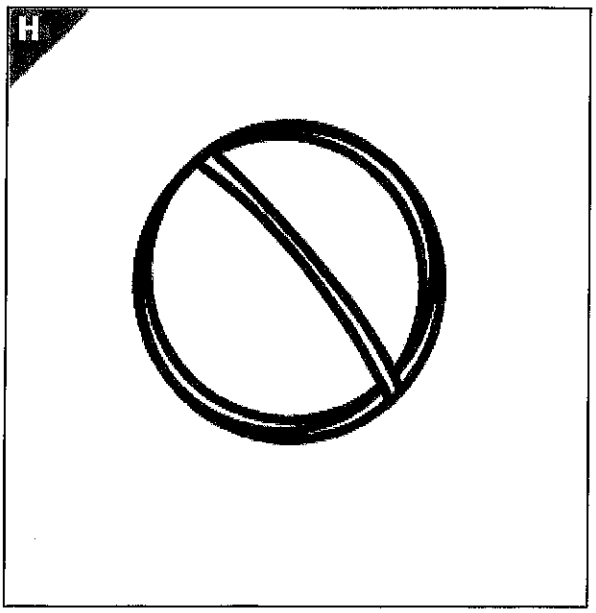
H

Package contents/parts

1. Soccer goal, 2×
2. Peg, 8×
3. Plastic pole, 4×
4. Bag for the pegs
5. Transport bag
6. Tie strap

General information

Reading and storing the user manual

This user manual accompanies these pop-up soccer goals. It contains important information on set-up and handling.

For improved readability, the pop-up soccer goals will be referred to only as the "soccer goal" below.

Read the user manual carefully before using the soccer goal. This particularly applies to the safety instructions. Failure to heed this user manual may result in severe injury, or damage to the soccer goal.

Store the user manual for future use. If you pass the soccer goal on to third parties, be absolutely sure to include this user manual.

This user manual can also be downloaded as a PDF file from our homepage **www.flexxtrade.de**.

Explanation of symbols

The following symbols and signal words are used in the user manual, on the soccer goal or on the packaging.

⚠ATTENTION! This signal symbol/word designates a hazard with moderate degree of risk which may lead to death or severe injury if not avoided.

NOTICE! This signal word warns against potential damages to property.

Safety

Proper use

The soccer goal is only designed for playing soccer in your garden. It is intended for private use only and is not suitable for commercial purposes.

Only use the soccer goal as described in this user manual. Any other use is deemed improper and may result in damage to property or even personal injury.

The manufacturer or vendor accepts no liability for damage caused by improper or incorrect use.

Safety instructions

⚠ATTENTION!

Not suitable for children under three years of age. Danger of suffocation due to small parts and packaging materials that can be swallowed!

Children can become trapped in the packaging material or swallow small parts when playing and suffocate or choke.

- Keep the packaging material and small parts away from children.

⚠ATTENTION!

Not suitable for children under three years of age. The cords and nets pose a risk of strangulation!

When playing, children could catch themselves in the cords or net and be strangled.

- Keep children away from the cords and nets.

⚠ATTENTION!

Risk of injury!

Tipping over of the soccer goal could result in serious injury.

- Do not allow children to use the goal frame and the net as a climbing frame. There is a risk of injury if the soccer goal tips over or the child falls over. Therefore, children have to be supervised during play.
- Always set up the soccer goal on a flat surface and anchor it firmly to the ground with the provided pegs. The soccer goal must not be used if it is not firmly secured against tipping over.
- Secure the soccer goal against tipping over when not in use.
- Do not use the soccer goal near swimming pools or water bodies. If the soccer goal falls in water, you could be caught in it and drown.

- Stop using the soccer goal if the plastic or metal parts of the soccer goal exhibit cracks or breaks or are deformed. Therefore, inspect all parts for damage before each use. Only replace damaged parts with corresponding original spare parts.
- Keep children away when setting the soccer goal up and taking it down. The soccer goal may only be set up and taken down by adults.
- The soccer goal is under tension when folded up. Secure the soccer goal with one hand when opening it. There is a risk of injury if the soccer goal suddenly unfolds.

NOTICE!

Risk of damage!

An unsuitable location can result in damage to property while playing soccer.

- Keep a minimum distance of 9.8 ft (3 meters) from other objects (such as electrical cables, plant pots, etc.).

Checking the soccer goal and package contents

NOTICE!

Risk of damage!

If you are not cautious when opening the packaging with a sharp knife or other pointed object, you may quickly damage the soccer goal.

- Be very careful when opening it.

1. Take the soccer goal out of the packaging.
2. Check to make sure that the delivery is complete (see **Fig. A**).
3. Check whether the soccer goal or the individual parts exhibit damage. If this is the case, do not use the soccer goal. Contact the manufacturer at the service address specified on the warranty card.

Assembling and setting up the soccer goal

⚠ATTENTION!

Risk of injury!

Tipping over the soccer goal could result in injury.

- Always set up the soccer goal on a flat surface and anchor it firmly to the ground with the provided pegs. The soccer goal must not be used if it is not firmly secured against tipping over.
- Before using pegs, make sure that the ground is suitable (e.g. there must not be any water pipes for garden sprinklers).
- Do not use the pegs on the beach. The pegs could easily come loose if the sand is not firm.

⚠ATTENTION!

Risk of injury!

Incorrect assembly may result in injury.

- Carefully assemble the soccer goal on a suitable, flat surface.
- Secure the soccer goal with one hand when opening it. There is a risk of injury if the soccer goal suddenly unfolds.

1. Take the soccer goal (1) out of the transport bag (5).
2. Loosen the tie strap (6) and carefully unfold the soccer goal (see **Fig. B**).
3. Connect the plastic poles (3) with one another.
4. Undo the zippers and push a plastic pole into each opening (see **Fig. C**).
5. Do up the zippers to prevent the plastic poles from coming loose.
6. Fix the soccer goal in the ground with the enclosed pegs (2).

Should securing the goal with pegs not be possible due to the ground conditions, use other appropriate means (such as sand bags) to prevent the soccer goal from tipping over.

Assembling and setting up the soccer goal

⚠ATTENTION!

Risk of injury!

Tipping over the soccer goal could result in injury.

- Always set up the soccer goal on a flat surface and anchor it firmly to the ground with the provided pegs. The soccer goal must not be used if it is not firmly secured against tipping over.
- Before using pegs, make sure that the ground is suitable (e.g. there must not be any water pipes for garden sprinklers).
- Do not use the pegs on the beach. The pegs could easily come loose if the sand is not firm.

⚠ATTENTION!

Risk of injury!

Incorrect assembly may result in injury.

- Carefully assemble the soccer goal on a suitable, flat surface.
- Secure the soccer goal with one hand when opening it. There is a risk of injury if the soccer goal suddenly unfolds.

1. Take the soccer goal (1) out of the transport bag (5).
2. Loosen the tie strap (6) and carefully unfold the soccer goal (see **Fig. B**).
3. Connect the plastic poles (3) with one another.
4. Undo the zippers and push a plastic pole into each opening (see **Fig. C**).
5. Do up the zippers to prevent the plastic poles from coming loose.
6. Fix the soccer goal in the ground with the enclosed pegs (2).

   Should securing the goal with pegs not be possible due to the ground conditions, use other appropriate means (such as sand bags) to prevent the soccer goal from tipping over.

Taking down and folding up the soccer goal

1. Pull the pegs (2) out of the ground.
2. Undo the zippers and remove the plastic poles (3).
3. Fold the soccer goal (1) up and hold it parallel to your chest.
4. Push corner A forward and then down towards corner B (see **Fig. D** and **E**).
   Two rings will form automatically.
5. Twist the corners A and B together until the rings fold into one another and collapse (see **Fig. F** and **G**).
6. Secure the three rings with the tie strap (6) (see **Fig. H**).
7. Put all pegs in the bag for the pegs (4).
8. Put the soccer goal, the plastic poles and the pegs in the transport bag (5).

Cleaning

NOTICE!

Risk of damage!

Improper handling of the soccer goal may result in damage.

- Do not use any aggressive cleaners, brushes with metal or nylon bristles or sharp or metallic cleaning utensils such as knives, hard scrapers and the like. They could damage the surfaces.

1. Clean the soccer goal (1) with a damp cloth.
2. Then let all parts dry completely.

Storage

- Make sure that all parts are stored in a dry and weather-proof location. Use the transport bag (5) for this purpose.