ET-33 USER MANUAL

ENO MUSIC

1.Product Illustration

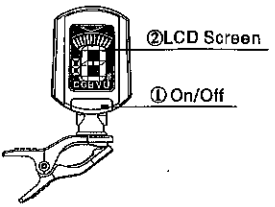

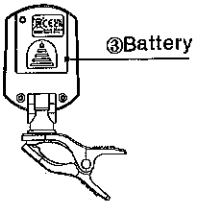

Tuning status display

2.Operating guide

Operation	Press Slightly	Press and hold for 3 seconds
Functions	Tuning Item Selection (C,G,B,V,U)	On power/Off power

1.After installing the battery,press button ON/OFF for 3 seconds,the machine will be on or off.
2.Press button MODE slightly,tuning items will be switched repeatly between C,G,B,V,U
①.You should select the instrument you require to be tuned.
②.Clip the tuner on a part of the instrument that will vibrate distinctly and adjust the tuner so you can see the display clearly.
③.Low:indicator is on the left.
High:indicator is on the right.
In-tune: indicator is in the middle and the screen will turn green.
Remarks:the string number and note name show on the screen together when tuning.
3.After power on, the tuner will restore the last settings used. A4=440 Hz. The current settings will be stored when switching off the tuner.
4.When powered on, the tuner will turn off automatically after 3 minutes if no button is pressed.

3.Technical specification

1. A4 frequency: 440Hz
2. Instruments: C(Chromatic), G(Guitar), B(Bass Guitar), V(Violin), U(Ukulele)
3. Tuning range: A0(27.5Hz)~A6(1760Hz) 4. Battery: CR2032 5. Size:35*48*54mm

4.Notification

*Prolonged exposure to sunlight, high and low temperature, high humidity, corrosive substances or high magnetic fields can lead to permanent damage.
*Avoid rough handling and heavy operation.
*Please use a clean and dry soft fibre cloth to clean the tuner as required. Do not use water or chemicals.
*If the tuner shows signs of abnormal operation then remove the battery for 30 seconds before replacing.
*Replace the tuner battery when the display appears faded and not clear.
*Please remove the battery when the tuner is to be not used for a long time.
*Compatible battery type: CR2032,nominal voltage 3V.
*Remove and immediately recycle or dispose of used batteries according to local regulations, keeping them away from children. Do not discard batteries in household trash or burn them.
*Remove and immediately recycle or dispose of batteries from products that will not be used for extended periods according to local regulations.
*Even used batteries may cause severe injury or death.
*Contact your local poison control center for treatment information.
*Non-rechargeable batteries should not be recharged.
*Do not force discharge, recharge, disassemble, or heat above the manufacturer's rated temperature, or incinerate. Doing so may cause injury from venting, leakage, or explosion, leading to chemical burns.
*Ensure batteries are correctly installed according to polarity (+ and -).
*Do not mix new and old batteries, different brands, or types of batteries such as alkaline, carbon-zinc, or rechargeable batteries.
*Always secure the battery compartment completely. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH:** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours.**
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN.**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.

ENO MUSIC CO.,LTD.
Address:701, Fuchangsheng Industrial Estate, No.2 Chengxin Rd., Baolong Community, Baolong Street, Longgang District, Shenzhen, Guangdong.
Http://www.eno-music.com E-mail: info@eno-music.com